

LOADABLE LANGUAGES

The following steps will help the user step by step load a language to components and applications. There are 4 Steps to Loading a Language.

- I. Load KeyCard software to the mobile processor
 - A. If in Yield Mapping Mode
 - B. If in KeyCard application mode
- II. Select the desired language
 - A. Load desired language for the GreenStar Display
 - B. Load the desired language for the StarFire Receiver
 - C. Load the desired language for the to the Mobile Processor for the desired application
- III. Load Field Doc and target language to mobile processor.
- IV. Choose the target language

Example: Load KeyCard application/KeyCard Spanish language file, Load Field Doc Basic application/Field Doc Basic Spanish language file, etc.

Target languages only need to be loaded once. Language settings will be kept through reprogramming.

I. Load KeyCard to the mobile processor

A. If in Yield Mapping Mode:

1. Insert the KeyCard into the mobile processor and remove the data card
2. Press Info/Reprogram/Program Target/Mapping Processor
3. Select either
 - KEY---.y12 is KeyCard (Parallel Tracking/AutoTrac)
 - TRAC----.prp is KeyCard (Parallel Tracking/AutoTrac)

NOTE: If you do not have KeyCard as an option, select FDOC----.prp (Field Doc) and continue with Step Two, Three (1 and 2B) and Four.

B. If in KeyCard application mode:

1. Press Info/KeyCard/Program Target/Mobile Processor
2. Select either
 - KeyCard
 - KEY---.y12

NOTE: If you do not have KeyCard as an option, select Field Doc Basic and continue with Step Two, Three (1 and 2B) and Four.

II. Load the desired language.

A. Load the desired language for the GreenStar Display

1. Press INFO
2. Select KEYCARD
3. Select Target Languages
4. Select GreenStar Display

On the INFO Select Language Screen, select the target language for the GreenStar Display.

A warning will display explaining that the system is programming. Do not remove PC card or power.

The system will provide notification when programming is complete.

B. Load the desired language for the StarFire Position Receiver

1. Press INFO
2. Select KEYCARD
3. Select Target Languages
4. Select GPS Receiver

On the INFO Select Language Screen, select the target language for the StarFire Receiver.

A warning will display explaining that the system is programming. Do not remove PC card or power.

The system will provide notification when programming is complete.

C. Load the desired language for the to the Mobile Processor for the desired application

1. Press INFO
2. Select KEYCARD
3. Select Target Languages
4. From the INFO Target Languages screen, select Mobile Processor

On the INFO Language screen select the file that includes text about the target language and application (ex. KeyCard, Field Doc) that is currently loaded to the mobile processor.

If a software version that is not loaded to the processor is chosen the following warning will display:
ID 183 Language Warning. The language file could not be loaded.

NOTE: If you only have a Parallel Tracking or AutoTrac KeyCard proceed to Step Four

III. Load Field Doc and target language to mobile processor.

1. Press Setup/KeyCard
2. Select Field Doc Basic

Return to and complete II. Load Language to Mobile Processor for the desired application (skip Load Language to GreenStar Display and GPS Receiver)

1. Press Setup/KeyCard
2. Select Field Doc Planter

Return to and complete II. Load Language to Mobile Processor for the desired application (skip Load Language to GreenStar Display and GPS Receiver)

IV. Choose the target language

1. Press Setup/System Settings/Language
2. Select the desired language

NOTE: After languages are loaded users only need to go to Setup/System Settings/Language to change language selection.