





GreenStar 2™ Rate Controller Quick Reference Guide

 Select Menu button to access all display applications

 Select GS2 Rate Controller button to access the GS2 Rate Controller Main Screen


 Main Rate Controller Screen
(Main screen layout will change depending on operation used)

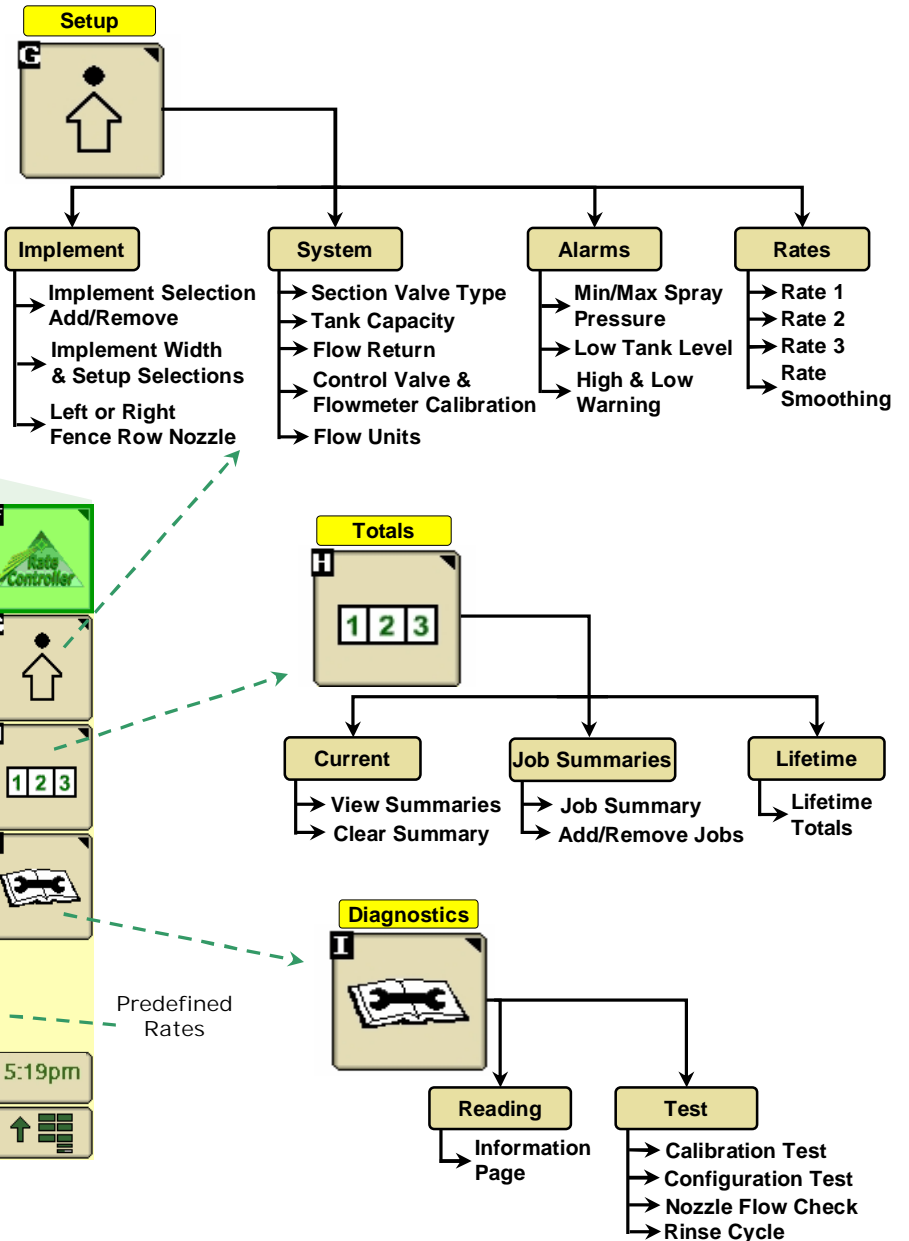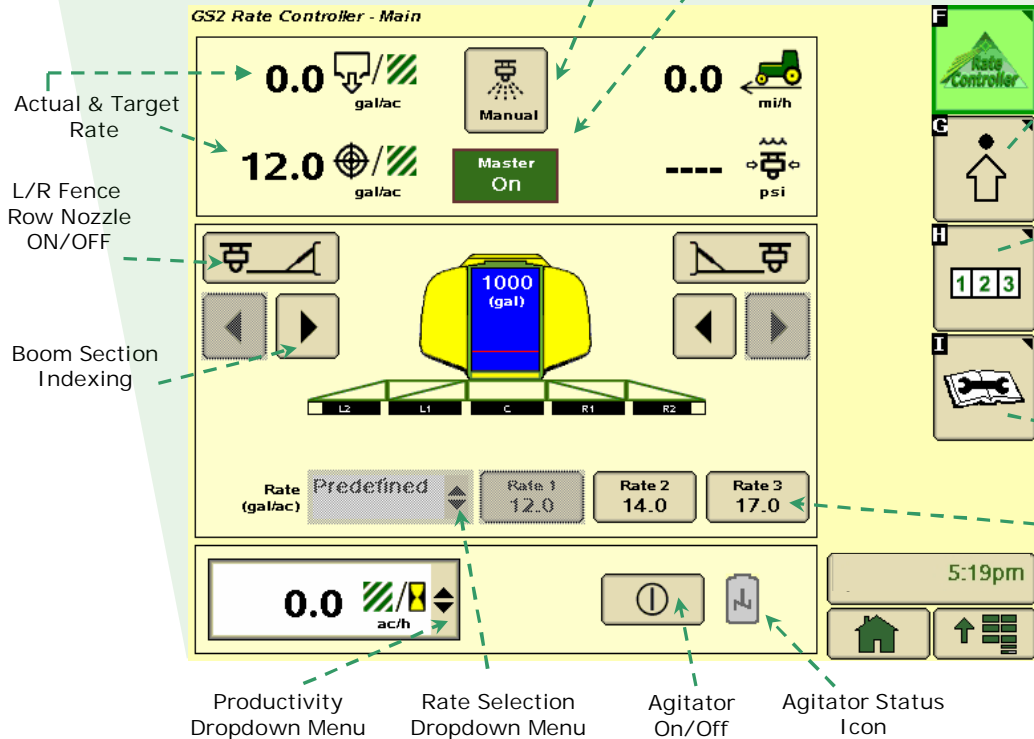



Predefined Rates


GreenStar 2™ Rate Controller Quick Reference Guide

1. Getting Started

a.  Select Menu Button to access all display applications

b.  Select GS2 Rate Controller Button to access the GS2 Rate Controller Main Screen


c.  Select the Setup button to access:
 • Implement
 • Systems
 • Alarms
 • Rates


d.  Select Implement Tab

e. Select Implement Dropdown Menu
 • Refer to the Contents page in the Owners Manual for detailed Setup Instructions for each Implement Type

Implement	Pull-behind Sprayer	→ Refer to Sprayer Setup	
	Pull-behind Sprayer		
	Self-propelled Sprayer		
	Liquid Fert. Tool		→ Refer to Liquid Fertilizer Setup
	NH3 Tool		→ Refer to NH3 Tool Setup
Planter	→ Refer to Planter Setup		

2. Select Menu > GreenStar 2 Pro

a.  Select Resource/Conditions button to access:
 • Client
 • Farm
 • Field
 • Task
Note: For setup instructions Refer to GS2 Basic Operators Manual

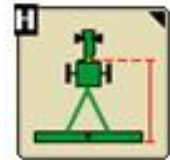b.  Select Equipment button to access:
 Equipment Tab
 • Connection Type
 • Set GPS & Hitch Offsets
 Implement 1 Tab
 • Set Offsets
 • Swath Control (If running Swath Control Pro application box must be checked)



Swath Control

Exterior Boundaries
 Minimize Overlap 0 %

Interior Boundaries
 Minimize Skip 100 %

Coverage
 Minimize Skip 100 %

Turn on (sec): 1.0 Turn off (sec): 0.0

Note: For detailed setup instructions refer to the Swath Control Pro Settings Quick Sheet located in the Operators Manual