

# JDLink™ Registration



**JOHN DEERE**

**30Jan09 (ENGLISH)**

**John Deere Ag Management Solutions  
(30JAN09)**

LITHO IN U.S.A.  
COPYRIGHT © 2008  
DEERE & COMPANY  
Moline, Illinois

All rights reserved.  
A John Deere ILLUSTRATION © Manual

PC21402-19-08DEC08

## Activate JDLink

*NOTE: This activation is good for 30 days. If customer does not activate within 30 days, terminal will become inactive.*

The JDLink Terminal needs to be activated to register and verify registration. There is a free 30 day dealer installation activation of the JDLink Terminal. This can be used if the end operator does not want their prepaid subscription to start at the time of installation.

### 30 Day Dealer Installation Activation:

1. Log on to <http://stellarsupport.deere.com/>.
2. Select JDLink under Activations & Subscriptions.
3. Enter the JDLink Terminal S/N.
4. Select option to activate or upgrade service level (with COMAR number).
5. Accept the License Agreement.
6. Select Dealership.
7. Enter the COMAR number.
8. Verify the selected service level, and enter first name, last name, E-mail, desired JDLink web username and password.
9. Work with customer to create a user, and properly assign this JDLink system to the customer's equipment group.

*NOTE: After activation is complete (please wait for verification through email before proceeding,*

*this could take up to two days in Europe) it is required to register and verify registration before installation will be complete and the JDLink system will be ready to use.*

### Customer Prepaid Subscription Activation:

1. Log on to <http://stellarsupport.deere.com/>.
2. Select Activations & Subscriptions.
3. Select the JDLink Terminal UA.
4. Select option to purchase or renew a subscription.
5. Accept the License Agreement.
6. Select JDLink subscription length.
7. Select Dealership.

*NOTE: This will be to notify you by e-mail when activation is complete and the JDLink system is ready to use.*

8. Select to receive e-mail and enter valid e-mail.
9. Review order, enter payment information and submit.
10. Work with dealer to group the JDLink Terminal.
11. Work with dealer to create user name and password for the JDLink Web.

*NOTE: Register your JDLink system if this was not done ahead of time by dealer. Once registration is complete and verified your JDLink system is ready to use.*

## Register JDLINK

After activation has been complete (either 30 day dealer, or customer prepaid), JDLINK Terminal needs to be registered. Registration can be completed using one of two different methods.

### Method 1 - GTConfigTool (preferred if there is no web access available at installation location).

1. Turn key on.
2. Connect PC to JDLINK Terminal using GTConfigTool and cable.

*NOTE: The GTConfigTool is available for order at the following location, Pathways/Service/Customer Support/ SERVICEGARD Special Tool Catalog. Search for your tool by number or name. JDLINK CTM provides information on how to use the GTConfigTool.*

3. Launch GTConfigTool application.
4. Select proper COM port in upper right-hand corner of GTConfigTool main screen. If unable to connect, try another possible COM port.
5. Click Connect icon.
6. If JDLINK Terminal has never been registered, Configure Screen automatically appears. If JDLINK Terminal has been previously configured, operator will have to select the configure icon.
7. Fill out all required fields indicated by a red circle with a white right-hand arrow.
  - a. Equipment ID
  - b. Type
  - c. Make
  - d. Model
  - e. Engine Hours (JDLINK Select only)
  - f. VIN (JDLINK Ultimate only, no red circle with a white right-hand arrow)
  - g. Battery Type
  - h. Low Voltage Hibernation Threshold (Volts)
    - i. Disconnect Switch
8. Submit.
9. **For Ultimate Only**, verify JDLINK Data Portal registration status.
  - a. Go to the OGD tab.

- b. Within the OGD tab go to the Configuration tab.

*NOTE: Registration may take a few minutes.*

- c. Verify that Registration Status is Registered (If Registration Status does not show as Registered, refer to JDLINK CTM for diagnostic procedures).

### Method 2 - JDLINK Web

1. Log on to JDLINK Web at <https://gtweb.qualcommapps.com/GlobalTRACS/Portal/Login/login.aspx>.
2. Go to Setup-Terminals.
3. Locate the proper terminal S/N within the Terminal ID column. Then select the Equipment ID associated to that terminal.
4. Fill out all required fields indicated by a red circle with a white right-hand arrow.
  - a. Equipment ID
  - b. Type
  - c. Make
  - d. Model
  - e. Engine Hours (JDLINK Select only)
  - f. Vin (JDLINK Ultimate only, no red circle with a white right-hand arrow)
  - g. Battery Type
  - h. Low Voltage Hibernation Threshold (Volts)
    - i. Low Voltage Duration
    - j. Disconnect Switch
5. Choose Parameter Configuration Send Priority (Normal, or Immediate).
6. Save.
7. **For Ultimate Only**, verify JDLINK Data Portal registration status (For Ultimate Only).
  - a. Go to Monitor Equipment Summary or Hours.
  - b. Scroll down to JDLINK System.

*NOTE: JDLINK Registration will complete the next time the key is turned ON.*

- c. If Registration Status does not show as Registered, refer to JDLINK CTM for diagnostic procedures.