





**John Deere AutoTrac™**  **JOHN DEERE**  
**Controller**

PFP11790



**John Deere AutoTrac™**  **JOHN DEERE**  
**Controller**

PFP11790

## About This Document

This User Guide will help you learn how to perform common tasks with your John Deere AutoTrac Controller. It is a supplement to the controller Operator's Manual.

Read the Operator's Manual for the following information:

- How to operate your controller safely
- Theory of operation
- Initial setup
- Diagnostics

Copyright © 2011 Deere & Company. All Rights Reserved. THIS MATERIAL IS THE PROPERTY OF DEERE & COMPANY. ALL USE AND/OR REPRODUCTION NOT SPECIFICALLY AUTHORIZED BY DEERE & COMPANY IS PROHIBITED. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

## About This Document

This User Guide will help you learn how to perform common tasks with your John Deere AutoTrac Controller. It is a supplement to the controller Operator's Manual.

Read the Operator's Manual for the following information:

- How to operate your controller safely
- Theory of operation
- Initial setup
- Diagnostics

Copyright © 2011 Deere & Company. All Rights Reserved. THIS MATERIAL IS THE PROPERTY OF DEERE & COMPANY. ALL USE AND/OR REPRODUCTION NOT SPECIFICALLY AUTHORIZED BY DEERE & COMPANY IS PROHIBITED. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

**Section Contents**

**AUTOTRAC CONTROLLER CALIBRATION ..... 2**  
Calibration Procedure ..... 2  
Wheel Angle Sensor (WAS) Calibration ..... 3  
Valve Calibration ..... 4

**Section Contents**

**AUTOTRAC CONTROLLER CALIBRATION ..... 2**  
Calibration Procedure ..... 2  
Wheel Angle Sensor (WAS) Calibration ..... 3  
Valve Calibration ..... 4

### John Deere AutoTrac Controller Calibration

The John Deere AutoTrac Controller calibration procedure must be completed with a passing status prior to using AutoTrac.

#### Calibration Procedure

- Calibration procedure will require a large, open, level surface to complete the required steps.
- Calibration procedure will require the tractor to be driven slowly at full throttle for approximately 2 to 5 minutes to bring hydraulic fluid to operating temperature before beginning calibration procedure.

**IMPORTANT: Read all instructions before calibrating the AutoTrac Controller.**

 
**Calibrate AutoTrac Controller without an implement connected to the tractor to avoid damage to the tractor and/or implement.**

1. Turn AutoTrac Controller Master Switch to **ON**.

2. **Menu** .....



3. **GreenStar** .....




4. **Guidance** .....



5. **Guidance Settings** .....



 6. **AutoTrac Advanced Settings** ..



7. Navigate to Page Three using **Next Page** button .....



8. **CAL** .....



### John Deere AutoTrac Controller Calibration

The John Deere AutoTrac Controller calibration procedure must be completed with a passing status prior to using AutoTrac.

#### Calibration Procedure

- Calibration procedure will require a large, open, level surface to complete the required steps.
- Calibration procedure will require the tractor to be driven slowly at full throttle for approximately 2 to 5 minutes to bring hydraulic fluid to operating temperature before beginning calibration procedure.

**IMPORTANT: Read all instructions before calibrating the AutoTrac Controller.**

 
**Calibrate AutoTrac Controller without an implement connected to the tractor to avoid damage to the tractor and/or implement.**

1. Turn AutoTrac Controller Master Switch to **ON**.

2. **Menu** .....



3. **GreenStar** .....




4. **Guidance** .....



5. **Guidance Settings** .....



 6. **AutoTrac Advanced Settings** ..



7. Navigate to Page Three using **Next Page** button .....

 


8. **CAL** .....



Wheel Angle Sensor (WAS) Calibration

- 1. Below Wheel Angle Sensor Calibration select **CAL** button.



- 2. **Next** .....



*NOTE: Machine may need to drive forward slowly to allow the wheels to reach their full range of motion.*

- 3. Turn wheel until LEFT stop.



- 4. **Next** .....

- 5. Turn wheel until RIGHT stop.



- 6. **Next** .....

- 7. Turn wheel back to CENTER with wheels straight.

*NOTE: It is recommended to pick a point in the horizon ahead of machine, slowly drive forward while adjusting steering wheel until driving in a straight line.*



- 8. **Next** .....

- 9. Drive in straight line at or above 16 km/h (10 mph) until calibration is complete.

 
*NOTE: It is recommended to pick a point in the horizon ahead of machine, slowly drive forward while adjusting steering wheel until driving in a straight line.*



- 10. **Next** .....

Wheel Angle Sensor (WAS) Calibration

- 1. Below Wheel Angle Sensor Calibration select **CAL** button.



- 2. **Next** .....



*NOTE: Machine may need to drive forward slowly to allow the wheels to reach their full range of motion.*

- 3. Turn wheel until LEFT stop.



- 4. **Next** .....

- 5. Turn wheel until RIGHT stop.



- 6. **Next** .....

- 7. Turn wheel back to CENTER with wheels straight.

*NOTE: It is recommended to pick a point in the horizon ahead of machine, slowly drive forward while adjusting steering wheel until driving in a straight line.*



- 8. **Next** .....








- 9. Drive in straight line at or above 16 km/h (10 mph) until calibration is complete.

*NOTE: It is recommended to pick a point in the horizon ahead of machine, slowly drive forward while adjusting steering wheel until driving in a straight line.*

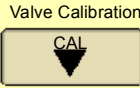







- 10. **Next** .....

Valve Calibration

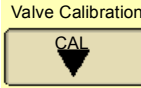- 1. Under Valve Calibration select **CAL** button ..... 
- 2. **Next** ..... 
- 3. Begin moving forward in the lowest gear at the maximum RPM. 
- 4. **Next** ..... 
- 5. Wait for calibration to finish.
- 6. Repeat steps 4 and 5 until three left turn and three right turn calibrations have been completed.
- 7. Turn steering wheel back to center with wheels straight. 
- 8. **Next** ..... 
- 9. To exit calibration screen select **Accept** ..... 

Valve Calibration

- 1. Under Valve Calibration select **CAL** button ..... 
- 2. **Next** ..... 
- 3. Begin moving forward in the lowest gear at the maximum RPM. 
- 4. **Next** ..... 
- 5. Wait for calibration to finish.
- 6. Repeat steps 4 and 5 until three left turn and three right turn calibrations have been completed.
- 7. Turn steering wheel back to center with wheels straight. 
- 8. **Next** ..... 
- 9. To exit calibration screen select **Accept** ..... 