 


# GreenStar™ Rate Controller PLANTING QUICK REFERENCE GUIDE

## Documentation and Equipment Setup

Select Main Menu button



Select GreenStar button




Select Resource/Conditions button to setup and access:



- Client
- Farm
- Field
- Task

Select Equipment button to setup and access:

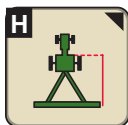

### Equipment Tab

- Machine information
- GPS & Hitch Offsets
- Connection Type

### Implement Tab

- Implement information
- Implement widths and offsets

*Equipment and Implement Setup is Optional for GreenStar Rate Controller and required for Swath Control Pro.*

## Getting Started


1. Select Main Menu button.....



2. Select GreenStar Rate Controller button.....  
Each GreenStar Rate Controller will have a dedicated icon.




3. Select the Setup button to setup and access.....

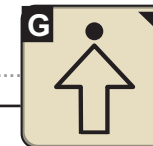

### Implement

- Implement Selection
- Implement Width
- Section Setup
- Height Switch Setup

4. Select Totals button for access.....

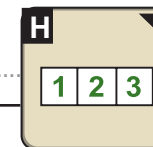

### Current


- View Summaries
- Clear Summary

For detailed setup instructions please refer to the GreenStar Rate Controller Operator's Manual and the GS2 Basic Operator's Manual.

# GreenStar™ Rate Controller PLANTING QUICK REFERENCE GUIDE

## Getting Started (cont)

5. Select Diagnostics button. Each GreenStar Rate Controller will have a dedicated icon.

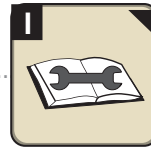


### Readings

- Hardware/Software
- Switchbox
- Section Status
- System Voltages
- Working Parameters
- Switches/Status

### Tests

- Section Test

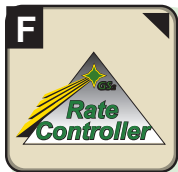

Main Rate Controller Screen

Master Switch Indicator/Implement Height Switch Indicator

Speed

Area per Time

Total Area

Sections on/off

Implement Sections

Rate Input Box

Setup

Totals

Diagnostics

For detailed setup instructions please refer to the GreenStar Rate Controller Operator's Manual and the GS2 Basic Operator's Manual.